

**TRU TEMPERATURE
REFERENCE UNIT
MODEL 938**



Isotech North America
158 Brentwood Drive, Unit 4
Colchester, VT 05446

Phone: (802)-863-8050
Fax: (802)-863-8125

www.isotechna.com
sales@isotechna.com

The company is always willing to give technical advice and assistance where appropriate. Equally, because of the programme of continual development and improvement we reserve the right to amend or alter characteristics and design without prior notice. This publication is for information only.

The UKAS logo shown in the corner of the pages in this report/handbook is to inform readers of our accreditation number only and does not imply endorsement by UKAS

of the information herein. Please refer to our Website for our latest UKAS Accredited Schedule.

CONTENTS

DESCRIPTION	PAGE NO:
Guarantee	3
CE Information	4 - 5
Health & Safety	6
Thermocouple Referencing	7
Outline Description	8
Temperature Control	9
Installation	10
Supply & Alarm Wiring	11
Maintenance	12
Panel & Layout Function	13
TRU Parts List	14

GUARANTEE

This instrument has been manufactured to exacting standards and is guaranteed for twelve months against electrical break-down or mechanical failure caused through defective material or workmanship. Failure caused by misuse is not covered. In the event of failure covered by this guarantee, the instrument must be returned, carriage paid, to the supplier for examination, and will be replaced or repaired at our option.

**FRAGILE CERAMIC AND/OR GLASS PARTS ARE NOT COVERED BY THIS
GUARANTEE**

**INTERFERENCE WITH, OR FAILURE PROPERLY TO MAINTAIN THIS
INSTRUMENT MAY INVALIDATE THIS GUARANTEE**

RECOMMENDATION

The life of your **ISOTECH** Instrument will be prolonged if regular maintenance and cleaning to remove general dust and debris is carried out.

Serial No:.....

 
Date:.....



Isotech North America
158 Brentwood Drive, Unit 4
Colchester, VT 05446

Phone: (802)-863-8050
Fax: (802)-863-8125

www.isotechna.com
sales@isotechna.com



The company is always willing to give technical advice and assistance where appropriate. Equally, because of the programme of continual development and improvement we reserve the right to amend or alter characteristics and design without prior notice. This publication is for information only.



EMC INFORMATION



This product meets the requirements of the European Directive on Electromagnetic Compatibility (EMC) 89/336/EEC as amended by EC Directive 92/31/EEC and the European Low Voltage Directive 73/25/EEC, amended by 93/68/EEC. To ensure emission compliance please

ensure that any serial communications connecting leads (RS232 or RS422(485)) are fully screened.



The product meets the susceptibility requirements of EN 50082-1, criterion B.

Symbol Identification	Publication	Description
	ISO3864	Caution (Refer to Handbook)
	IEC 417	Caution, Hot Surface

ELECTRICAL SAFETY

This equipment must be correctly earthed.

This equipment is a Class 1 Appliance. A protective earth is used to ensure the conductive parts can not become live in the event of a failure of the insulation.

The protective conductor of the flexible mains cable which is coloured green/yellow **MUST** be connected to a suitable earth.

The blue conductor should be connected to Neutral and the Brown conductor to Live (Line).

Warning: Internal mains voltage hazard. Do not remove the panels.

There are no user serviceable parts inside. Contact your nearest Isotech agent for repair.

Voltage transients on the supply must not exceed 2.5kV.

Conductive pollution, eg. Carbon dust, must be excluded from the apparatus. EN61010 pollution degree 2.

The apparatus has two input connectors for temperature sensors, see Figure 1. These inputs are only suitable for either a thermocouple or resistance thermometer. No other sensor or signal may be connected.

ENVIRONMENTAL RATINGS

Operating Temperature 0-50 °C

Relative Humidity 5-95%, non condensing



HEALTH AND SAFETY INSTRUCTIONS

1. Read all of this handbook before use.
2. Wear appropriate protective clothing.
3. Operators of this equipment should be adequately trained in the handling of hot and cold items and liquids.
4. Do not use the apparatus for jobs other than those for which it was designed, ie. the calibration of thermometers.
5. Do not handle the apparatus when it has hot (or cold), unless wearing the appropriate protective clothing and having the necessary training.
6. Do not drill, modify or otherwise change the shape of the apparatus.
7. Do not dismantle the apparatus.
8. Do not use the apparatus outside its recommended temperature range.
9. If cased, do not return the apparatus to its carrying case until the unit has cooled.
10. There are no user serviceable parts inside. Contact your nearest Isotech agent for repair.
11. Ensure materials, especially flammable materials are kept away from hot parts of the apparatus, to prevent fire risk.

THERMOCOUPLE REFERENCING

It cannot be emphasised too strongly that thermocouple outputs are dependent upon emfs generated by temperature differentials along individual conductors and not upon the presence of junctions in the circuitry. However, access to an emf of this type, for measurement purposes, requires the connection of additional conductors, and these ineluctably introduce their own characteristic thermo-emfs into the circuit. The resultant net emf will be the algebraic sum of the individual emfs corresponding to the respective temperatures of the end-points of each conductor, i.e., of the junctions present in the measuring circuit. Indeed, it is this principle that governs the practical application of thermocouples, although it should be noted that net emfs are functions of actual temperatures and are not uniquely determined by temperature differences. In other words, the Seebeck coefficient (which is defined as the emf generated per unit temperature difference) for a given material is, itself, a function of temperature and, moreover, the uniqueness of its value at any given temperature is conditional upon physical and chemical homogeneity of that material.

For practicability as a measuring device, the principal implication for a thermocouple is that it must contain two junctions, one (the measuring junction) held at the temperature required to be determined and the other (the reference junction) maintained at a known (reference) temperature. Connections to the terminals of a measuring instrument potentially constitute thermocouple junctions and care must be taken in arranging circuitry to eliminate their contribution or to compensate for any influences thereby introduced. Qualitative acknowledgement, from a thermoelectric point of view, of the presence of every element in a composite circuit has led to a variety of arrangements to eliminate unwanted components of emf from thermocouple measurements. However, the practical necessity remains of providing some means of temperature referencing.

Some instruments involve the use of their terminals as reference junctions, for application with a specified type of thermocouple that possesses one other junction only (the measuring junction). Such instruments usually incorporate a facility for (electronic) "cold junction compensation", thus indicating an emf relative to 0 °C or, possibly, a direct reading of temperature. However, a fundamentally more satisfactory procedure is to form reference junctions using the conductors themselves and to employ an isothermal environment at a known temperature (typically 0 °C) into which these junctions can be immersed. Several Isotech products are dedicated to the

provision of such environments; it is interesting to note, also, the application of another thermoelectric phenomenon, Peltier cooling, to establish the working conditions of those Isotech units designed to provide a reference temperature of 0°C.

OUTLINE DESCRIPTION

The TRU unit is intended to produce a 0°C or other customer specified reference temperature environment that is sufficiently accurate and stable for thermocouple applications.

It is a self-contained unit, housing a calibration environment in the form of a metal block cooled by Peltier refrigeration modules controlled by solid-state circuitry, thus providing essentially maintenance-free operation. Heat sinks and fan-cooling are incorporated in the assembly.

A feature of the TRU is its rapid rate of cooling; a stable working temperature can normally be attained within a period of ten minutes of switching on. The unit is very tolerant of high ambient temperatures.

Two models are available. They differ in that the block, in one case, has six pockets 6.2mm in diameter and in the other, eight pockets 8mm in diameter. The latter, therefore, provides a capacity of more than double that of the former, and can accommodate up to 100 thermocouple junctions.

TEMPERATURE CONTROL

Set in the underside of the block is a platinum resistance thermometer (PRT), which is used to control the cooling function.

A Eurotherm 2216 PID Controller is used to give excellent stability and accuracy at the desired temperature.

INSTALLATION

Apart from inserting the thermocouple reference junctions, the only action required is connecting the mains cable and the alarm facility (if this is to be used).

It is advisable, prior to introducing the thermocouple junctions, to half-fill each pocket with silicone grease.

This will improve thermal coupling with the block and also minimise the likelihood of contact with moisture (caused by condensation on cooling).

SUPPLY AND ALARM WIRING

The colour convention for the mains-supply cable is:

LIVE	-	BROWN
NEUTRAL	-	BLUE
EARTH	-	YELLOW AND GREEN

An Amphenol 7-pin circular socket is provided to facilitate connection to an alarm system, if desired, to signal out-of-temperature or power failure conditions.


ALARM WIRING

The alarm lead has 2 wires on cool down or heat up, the alarm will switch for as long as the TRU has deviated more than $\pm 0.2^{\circ}\text{C}$ around it's set-point.

MAINTENANCE

Units intended for use in dusty environments can be equipped with a fan filter for the purpose of keeping the heat-sink surfaces clean, thus maintaining efficiency of heat dissipation.

Other than changing the fan filter (if fitted), no maintenance is normally required.

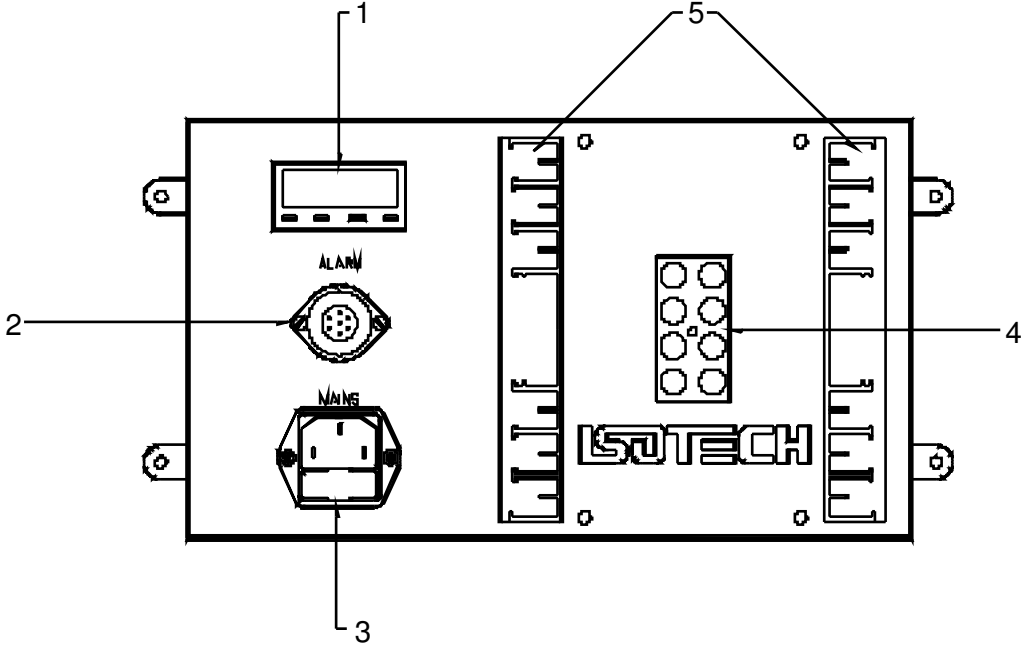

PANE
L
AND
LAYO
UT FUNCTION

1. Controller
2. Alarm-cable socket
3. Switched mains cable socket and fuse-holder
4. Metal block with pockets for thermocouple junctions
5. Cooling ducts and heat-sink fins

TRU SPARES PARTS LIST

<u>DESCRIPTION</u>	<u>PART NUMBER</u>
Block Assembly	940-02-00
P.R.T	935-14-33
Mains Transformer	935-19-29
Capacitor	935-04-01

Bridge Rectifier	935-38-08
Power Transistor	935-24-01
Mains Plug	935-16-08A
Alarm Socket	935-16-40
Fan 110V	935-17-31
Fan 240V	935-17-35
Fan Guard	935-17-18A
Fan Filter	935-17-32
Eurotherm 2216 Controller	935-06-101B